



Heating

ELECTRIC MICRO FLEECE THROW
OPERATING INSTRUCTIONS



100 WATTS



9 Heat settings

Select your level of warmth



Detachable controller

Removable for easier cleaning



Timer function

Turns off when you want it too



1600mm x 1200mm

Approx size of throw



1 Year warranty

Model No: CELMFT200

This page is intentionally left blank

General Care and Safety Guide

Thank you for choosing a Celsius Electric Micro Fleece Throw. This Throw has been designed and manufactured to high standards of engineering and with proper use and care, as described in this booklet, will give you years of useful service. Please read these instructions carefully and keep for future reference.

1. Use only the voltage specified on the rating label of the Electric Blanket.
2. It is recommended that this Electric Blanket is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
3. A correctly specified, undamaged extension cord may be used with this Electric Blanket provided it is used in a safe manner.
4. Do not operate this Electric Blanket with a damaged cord, plug or after the Electric Blanket malfunctions in any manner. Return to a qualified electrical person for examination, electrical service or repair.
5. This Electric Blanket is intended for household use only and not for commercial or industrial use.
6. Use this Electric Blanket only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
7. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
8. Do not use heavy or dense over blankets as they may lead to overheating of the Electric Blanket.
9. Do not trap, wrap or fold cords between bed slats, mattress, or springs, or against walls, headboards or bed frame as this may cause damage to the cord.
10. Carry out regular checks of the supply cord to ensure no damage is evident.
11. Do not pinch, flex, or expose the heating wire. Damaged heating wire may cause a fire hazard or personal injury.
12. Do not use the Electric Blanket on a bed used by an infant, incapacitated person, paraplegic, quadriplegic, diabetic, or by any person insensitive to heat or other vulnerable persons who are unable to react to overheating.
13. This Electric Blanket is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Electric Blanket by a person responsible for their safety.
14. This product is not intended for medical use in hospitals.
15. The power cord must be routed to the head of the bed to prevent being sat on or rolled on when getting in and out of the bed.
16. Do not place power cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
17. Do not use this product on a damp mattress or on a water bed.
18. If you find any damage to your Electric Blanket, if your Electric Blanket does not work, or is not working properly, contact the place of purchase or the Celsius Customer Services Team.
19. Repair work on the Electric Blanket by unqualified persons can cause serious risk to the user. Only use a qualified electrician.
20. There are no user serviceable parts installed in the Electric Blanket.
21. Do not use on an adjustable bed.
22. Turn off the Electric Blanket and disconnect the power cord when not in use.
23. Ensure hands are dry before handling the plug or controls.
24. Do not dry clean the Electric Blanket. Do not use bleach or harsh cleaning fluids as the cleaning liquid may damage the insulation of the heating element.
25. Do not use any pins, needles, safety pins or other sharp items on your Electric Blanket as they will damage the electric wiring.
26. Keep all dogs, cats, and other pets away from the Electric Blanket.
27. Never use the Electric Blanket to dry clothes.
28. Do not tuck in the Electric Blanket as this may cause over heating and/or fire.
29. The Electric Blanket can be used only with the Electric Blanket control provided by the manufacturer. Any other Electric Blanket control may cause overheating and/or fire.
30. Indoor use only.
31. Children should be supervised to ensure that they do not play with the Electric Blanket.
32. Do not unplug the product by the power cord while in use. Always turn the power off at the power outlet before you remove the plug. Remove by grasping the plug; do not pull on the cord.
33. Never sleep with the blanket on in a heat position.
34. The blanket must not be powered on when folded. Always ensure the blanket is laid flat without kinks or overlaps.

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

Important Instructions

Retain for future use

BEFORE FIRST USE

NOTE: This electric throw is to only be used as an over blanket.

Before using your Electric Throw for the first time:

- 1) The Electric Throw needs to be unfolded and laid flat before switching on.
- 2) We recommend that you switch your Electric Throw to the maximum setting for two to three hours before using then reduce the heat setting to your desired comfort level.

EVERYDAY USE

With normal use your Electric Throw will require 15 minutes of preheating before use.


IMPORTANT: Never sleep with your Electric Throw turned on.

9 HEAT CONTROLLER

The control features an On/Off switch and two buttons to control the heat settings and the timer. It also has an LED readout for temperature and timer settings.

OPERATING INSTRUCTIONS

1. You can program your Electric Throw to work for 1-9 or 12 hours and with 1-9 heat settings.
2. Plug into the mains power supply and switch on the power mains.
3. Switch on the Electric Throw with "On/Off" button.
4. The LED for timer and temperature will be illuminated.
5. By pressing the Temp button you will be able to adjust the heat settings from 1–9, 1 being lowest and 9 being highest. This will be indicated with the left LED.
6. You can also set the timer to turn the Electric Throw off after a predetermined time being 1-9 hours or 12 hours. By pressing the Timer button you will be able to adjust the number of hours from 1-9 (press once for each hour), pressing one more time will show "H" illuminated on the heat controller which indicates the timer is set to 12 hours. This will be indicated with the right LED.

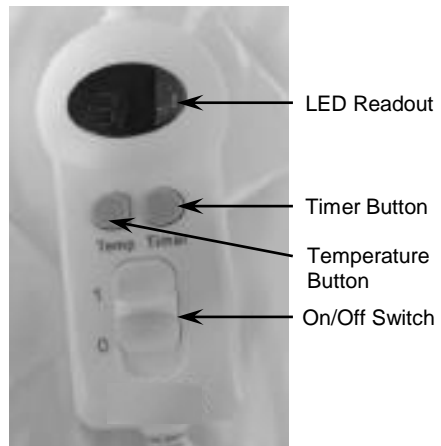

NOTE: When using the Throw some people may experience a tingling sensation whether alone or when touching someone else using an Electric Throw.

This "tingling sensation" is known as an electric field effect and caused by the current flowing through the elements creating an Electromagnetic Field (EMF). Some people may be more sensitive to feeling the EMF tingling sensation than others. It is known to occur across all makes and models.

This is no cause for concern and is in no way an electric shock.

Important Instructions

Retain for future use

STORING YOUR THROW

Always allow the Electric Throw to cool before folding and storing. Remove the control and roll or fold the Electric Throw loosely and store it in a bag or the bag it was supplied in. Avoid pressing sharp creases into the Electric Throw; for example do not store it under other items that may result in bending the wires of the Electric Throw.

CARE & CLEANING OF YOUR ELECTRIC BLANKET

Taking care of your Electric Blanket is easy and safe as long as you follow the steps outlined below:
DO NOT dry clean your Electric Throw. Dry cleaning will damage the wiring.
DO NOT use bleach or dry cleaning fluids.
DO NOT use a wringer.
DO NOT iron the Electric Throw.
DO NOT turn on the Electric Throw until it is completely dry.
DO NOT use mothballs or sprays of any kind.

SPOT CLEANING

Unplug and remove the control from the Electric Throw.
Wet sponge the affected area using a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
Gently sponge the affected area with clean water.
Use a neutral coloured towel to absorb excess water.

HAND WASHING

Unplug and remove the Electric Throw control.
Fold and pre-soak the Electric Throw for 15 minutes in a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
Gently squeeze the soap suds through for a few minutes.
Rinse in fresh lukewarm water.

MACHINE WASHING

Unplug and remove the Electric Throw control.
Fold and presoak the Electric Throw for 15 minutes in a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
Wash in mild soap and lukewarm water on the delicate or gentle cycle for 2 minutes.
Rinse in fresh lukewarm water.

AIR DRYING

Gently stretch the Electric Throw to its original size.
Air dry over a clothes line or shower rod. (DO NOT use clothes pegs or clips of any kind).
DO NOT use the Electric Throw until it is completely dry.

Important Instructions

Retain for future use

MACHINE DRYING

Preheat the dryer on the low temperature setting for 2 minutes.

Place the throw into the dryer and tumble dry on low setting for a maximum of 20 minutes until damp.

Remove the throw while it is still damp and gently stretch to its original size.

Continue to air dry over a clothes line or shower rod. (DO NOT use clothes pegs or clips of any kind).

Do not use the throw until it is completely dry.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

TECHNICAL SPECIFICATION

Model No: CELMFT200
Supply: 220-240VAC 50Hz
Wattage: 100W



Celsius – New Zealand

Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@celsius.co.nz

SUPPORT AND TECHNICAL ADVICE

Celsius – Australia

Monday – Friday 8am-5pm
Phone +61 (0)3 9365 5100
Phone 1300 465 324
info@celsiusforhome.com.au



One Year Warranty

Thank you for purchasing this Celsius product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Celsius limits the voluntary warranty to **three months**.

Celsius undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Celsius – New Zealand

PO Box 100-707

N.S.M.C

Auckland, 0745

Phone +64 (0)9 917 4000

Phone 0800 232 633

www.celsius.co.nz

Celsius – Australia

PO Box 574

South Morang

Victoria, 3752

Phone +61 (0)3 9365 5100

Phone 1300 465 324

www.celsiusforhome.com.au

Celsius One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.



CDB  GOLDAIR

New Zealand
PO Box 100-707,
North Shore Mail Centre,
Auckland, 0745

www.celsius.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752

www.celsiusforhome.com.au